

RANGE OF GLIDERS AND TROLLEYS FOR SECUROPE

GAMME DE COULISSEAUX POUR LA LIGNE DE VIE SECUROPE

CARROS DE TRANSLACIÓN PARA SECUROPE

LÄUFER FÜR SECUROPE SYSTEM

Code N° LDV001/075/060/093

June 2015

DESCRIPTION

The glider or trolley connects the user to the Securope Lifeline. It comprises a body and a locking device. Thanks to the geometry of the glider, all available intermediate anchors of the Securope system are suitable for all gliders. It slides along the cable as the user walks parallel thereto and passes easily through the intermediate anchors, meaning that the user does not have to be close to the lifeline.

To connect the glider LDV 001, the user opens the locking device and locks the glider onto the cable. When the karabiner is in place, it locks the glider on the cable and therefore cannot be removed unintentionally. LDV 093 and LDV 060 are permanently installed on the lifeline. LDV 075 is engaged on the lifeline at the bottom.

TECHNICAL SPECIFICATION

Comes with an installer and user manual.

Material: Stainless Steel AISI304

The gliders of Securope withstand the following loads.

 6 KN

 > 15 KN



Compliant with EN795 CLASS C
MADE IN EU



TEC0008-UK-Gliders Securope Horizontal-inclined LDV001-075-060-093

Glider LDV001 connection: Glider LDV001 must be connected to the cable prior to attach the karabiner.




Locking device open

Locking device closed

Karabiner on glider



LOCKING DEVICE

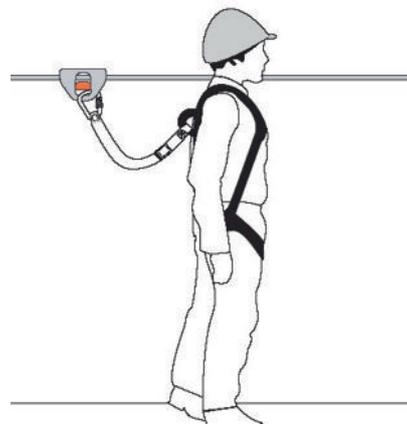

Code N°	Description	Weight	Comments
LDV 001	Glider with steel karabiner	0,441 kg	For Securope Horizontal/ inclined 0°- 15°. 1 per person
LDV 093	Trolley on bearings	1 Kg	For Securope horizontal in walls or ceiling configuration. If user is below the line for more than 3 m or block is attached to trolley.
LDV 060	Captive glider	0,254 Kg	For securope Horizontal on ceiling. 1 per person.
LDV 075	Fall arrest Zip!	0,6 Kg	For securope horizontal / inclined. 15° -65° Angle to be specified when ordering. 1 per person



ONE GLIDER PER USER. To disconnect the LDV 001 from the line, the user must first detach the karabiner of the glider and then open the locking device. It is forbidden to use any other karabiner to attach the lanyard to the glider than the one provided by Fallprotec. The function of safety of the glider could be affected if the karabiner used is not the original one. Any modification of or addition to equipment can only be carried out after prior written confirmation by Fallprotec.

TEC0008-UK-Gliders Securope Horizontal-inclined LDV001-075-060-093